## SEILER IQ

# LED Dental Microscope User's Manual





## **Table of Contents**

Installation & Assembly	3
LED Illumination Instructions	8
Description	_10
Set Up	11
Set Up	12
Specifications	12
Environmental Limitations	_13
LED Warranty	13
Interpupillary Distance Adjustment	13
Parfocalizing	14
The Color Filter and Cleaning	_15
Dimensions	16
Parts Breakdown	17
Owner's Record	_19
Notes	19

## **Installation & Assembly**







- 1. Remove the base from the box and set base bottom up (casters facing up) on the cardboard or foam from the box for cushion.
- 2. Remove the base weights from the weights box and insert the weights one at a time into the bottom of the base.


Align the pins with the holes and depress the thumb lock button to put the weights into place.

Flip the base over so that the top center post is facing upward.

\* Be sure to check to make sure that the weights are secured before flipping the base over.

- 3. Remove the pole from the packaging and insert pole into the center post hole in the base. Align the two indention marks in the pole to the holes in the base center post hole collar.
- 4. Once the pole is secured into the base, insert the Light Housing/Light Source portion of the microscope into the top of the pole. This is where the illumination system is housed. Make sure that the light source is secured while inserting the light source into the pole.




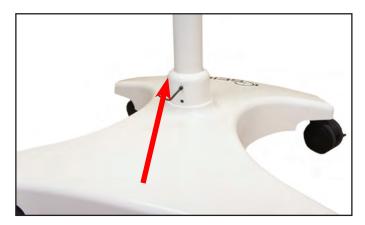


Once the pole is in the collar and indentions are aligned, use the provided Allen Wrench to tighten the two Allen bolts in the base center post collar to secure the pole.



5. Next insert the Pantographic Arm into the light source.

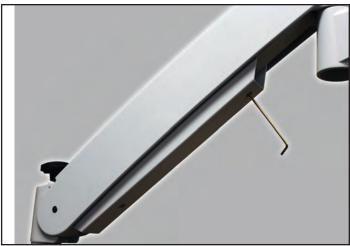

6. Loosen the two set screws on the bottom arm cover.

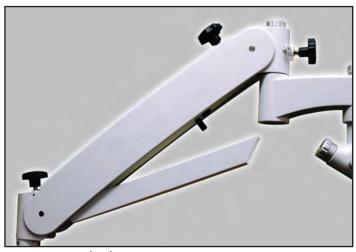

7. Remove the bottom cover.





8. Place the LED cable through the bottom cover.







9. Secure the bottom cover by tightening the set screws with the Allen Wrench.

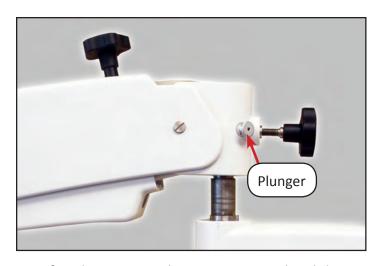

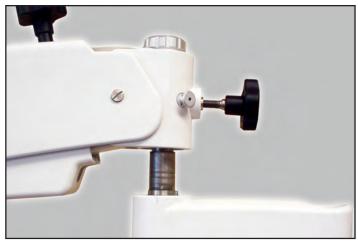

10. After the Pantographic Arm is inserted and the LED cable is secure, add the extension piece into the top of the Pantographic Arm on the under side. Be sure to loosen the black knob and pull plunger on the Pantographic Arm in order to insert the extension arm. Screw on the white locking knob.

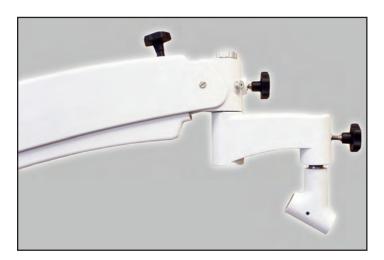

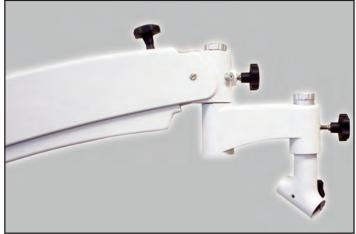

11. Next, insert the 45 degree coupler into the extension arm. Screw down the white locking knob.






12. Insert the Angle Arm into the 45 degree coupler. Screw down the white knob.






13. Insert the LED cable into the electrical connector on the Optical Pod. Be sure to the plug is seated completely and tighten Knurled locking ring.

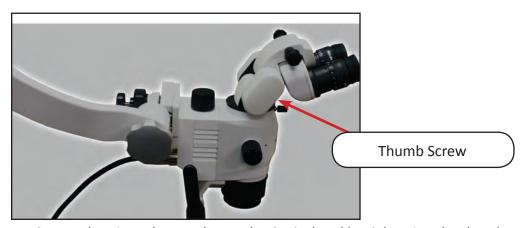

14. Secure the Binocular Head onto the Optical Pod by tightening the thumb screw.

#### PANTOGRAPHIC ARM BALANCING

NOTE: Pantographic Arm may need tension adjusted (black knob on top, turn counterclockwise to add tension, clockwise to release tension). This may need to be done if camera/video are added to the scope. This will increase or decrease the tension to desired function for user. The Pantographic Arm may have to be in the horizontal position to make adjustments.

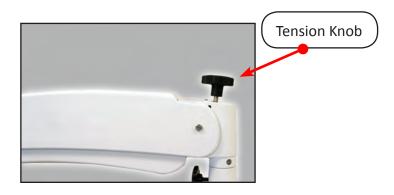

## **LED Illumination Instructions**

#### **Symbols**

NOTE:

Symbols used in this manual or on the device

ease of use and obtain effective results.



This term contains critical information regarding safe handling and use of this system. Device malfunction or property damage could result if these instructions are not followed.

This term contains important information regarding set-up and operation to facilitate



This symbol cautions that surfaces may be hot and could be a burn hazard.

**WARNING:** This term contains critical information by identifying conditions or practices that may

result in injury or loss of life if these instructions are not followed.

Hazard Actions To Be Taken/Prevented

**General** Read the manual in its entirety and heed all safety warnings

before operating the light source.

Only qualified personnel shall inspect the unit for internal

damage.

Warning - This device emits high intensity light that can be harmful.

WARNING
HIGH INTENSITY
LIGHT
Do not look
directly at light



Hazard Actions To Be Taken/Prevented

Exposure to intense bright light

Never look directly into the objective lens of the microscope when the unit is turned on as the light intensity can be

damaging.

Warning -This device presents a risk of fire.

Hazard Actions To Be Taken/Prevented

Fire Do not operate the unit near flammable materials including

flammable gases or liquids.

If the microscope is to be cleaned with a volatile liquid (such as

IPA) turn off the unit before proceeding.

After cleaning allow vapors to disperse before turning on.

#### Warning - This device presents a burn risk.

WARNING Burn hazard. Hot surface inside. Allow to cool



Hazard

Actions To Be Taken/Prevented

The unit produces heat.

Always allow the unit to cool to ambient temperature before significant amounts of attempting any adjustments or replacement of parts.

#### Warning -This device can overheat.

### WARNING Burn hazard. Hot surface inside Allow to cool before servicing.

Hazard

Actions To Be Taken/Prevented


Microscope overheating

Do not block air inlets or outlets (vents) with anything including plastic protection covers.

If the microscope overheats it will turn the light off. If this happens, turn off the unit and allow sufficient time for the unit to cool (approx. 10 minutes) then turn the unit back on.

If the light still remains off, turn off the unit and allow more time for cooling.



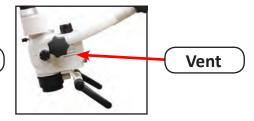

#### Warning -This device presents risk of electrical shock.



WARNING Only authorized personnel may service this equipment

Hazard

Actions To Be Taken/Prevented

Vent

This device operates at high electrical currents (>10A)

Only qualified personnel shall inspect the unit for internal damage.

Only operate the equipment in a professional manner as set forth in this manual.

Do not remove interior components from the power supply with the unit connected to wall outlet.

#### Warning - The internal components of this device can be damaged.



Hazard

Actions To Be Taken/Prevented

can create hazardous conditions and cause damage to internal components.

**Unqualified personnel** Only operate the equipment in a professional manner as set forth in this manual.

> Only employ authorized and properly trained personnel to perform maintenance functions.

#### Warning - This device emits electromagnetic energy which may be harmful.



Hazard

Actions To Be Taken/Prevented

This equipment has passed testing for EMI/RFI radiation and susceptibility; however, if not installed and used in accordance with the instructions, interference to other devices in the near

Select an appropriate location for the unit.

Ensure there is adequate separation distance between the unit and any device that may be affected by the electromagnetic energy coming from the unit.

Electromagnetic energy can travel through the power cord or through radio transmission.

vicinity may occur.

Power the illuminator from a separate AC main circuit that does not have a device connected that could be affected by the electromagnetic energy coming from the illuminator.

**Equipment Classification** 

Type of protection against electric shock Class I

Degree of protection against ingress of

water

IPXO

Degree of safety of application in the presence of flammable mixtures.

Equipment not suitable for use in the presence of flammable

mixtures.

Mode of operation: Continuous operation

## **Description**

#### Overview

The P1026 product is an LED illumination system integrated into a Seiler surgical microscope. The power supply for the system is mounted between the vertical post and microscope swivel arm and is connected via a heavy duty custom interface cable.



Photo above shows power supply module with interface cable.



Photo above shows rear view of the microscope and the electrical connector.

#### **Controls:**

The On/Off control for the system is located on the front face of the power supply, which is mounted on the post end of the swivel arm.

Light output intensity is controlled by a knob located on top of the microscope.



Photo above shows microscope light intensity control.

#### **Cooling:**

The microscope unit contains a fan system that utilizes an air inlet located on the rear panel above the power connector and outlet side vents to provide cooling for the LED illuminator. The large electrical connector located on the microscope provides power from the power supply for the illumination and cooling systems.

**Caution**: The cooling intake by the rear connector and the vents on either side of the microscope must not be blocked or restricted. Overheating may occur.



Photo to the left shows cooling vents on the filter control side.



Photo to the left shows rear cooling intake port.

12 volt Auxiliary power jack and Main ON/OFF

indicator

The front panel of the power supply contains the main power On/Off push button switch and a barrel plug connector power jack output for operating a camera.

The max output is 12vdc @ 500mA. The barrel plug is center pin positive.



Photo to the left shows the 12 vdc output connection and On/Off button

## Set Up

**Unpack** Carefully unpack all components. If necessary, the unit can be cleaned with

isopropyl alcohol and a soft cloth. Inspect all components for any signs of damage

that may have occurred during shipping.

If shipping damage is suspected, notify Seiler or your authorized dealer

immediately.

**Connect the Power** 

Cord

Plug the power cord into a wall receptacle. The system features universal power

input range of 90 - 240 vac / 50-60Hz

#### **Maintenance**

If the unit should malfunction, and this troubleshooting matrix does not correct the problem, then contact technical assistance.

**Console Won't Power** 

Up

Check.... AC power and that cord is plugged in. Check.... Fuses are installed and in good order. Check.... On/Off switch on front panel is 'ON'.

Check.... If air vents are blocked or fans are not operating then the over-

temperature thermal circuit will turn off the LED. Correct the blockage and turn off the LED power supply for 10 minutes to allow the LED to cool, then retry. If it still will not illuminate wait for a longer period of

time before turning on the power.

**Temperature High or** 

Exceeded

Check.... Ambient air temp is too high, improve air.

Check.... Air vents blocked or restricted.

**Replacing the Fuses** Use only fuses rates as marked on the rear panel.

Replace the fuses as follows:

1. Disconnect the device from the main power supply.

2. Retract fuse holder drawer on mains jack.

3. Measure resistance of each fuse, and replace as necessary.

4. Close fuse holder drawer.

5. Re-attach mains power cable.

**Cleaning** Exterior surface cleaning with window cleaner.

Do not attempt to clean any internal components.

## **Specifications**

Main Cable/Jack 10 Amp / 250 VAC IEC 320/C13

**Power Supply** 90-264 VAC, 47/63 Hz, 2.0A@115VAC

**Fuses** 5x20mm 3A 250V

**ANSI/UL** 61010-1

**CAN/CSA** C22.2 Number 61010-1

**CENLEC** EN 61326-1:2006

Rate Life (LED) 40,000 Hours

**LED Power** 35 Watts

Consumption

## **Environmental Limitations**

	Operating Limits	Storage Limits
Temperature	10° to 25° C (50° to 77°F)	0° to +50° C (32° to 122°F)
Relative Humidity	30% to 75%	0% to 100% (Non-Condensing)
Air Pressure	T700 hPa to 1060 hPa	Same

## **LED Warranty**

#### Limited Guarantee / Warranty

Seiler Instrument warrants this product to be free from defect in material and workmanship for a period of 12 months following original purchase. The warranty excludes lamps, lamp sockets, and any other items that have been misused, neglected, damaged, altered, or used in any manner inconsistent with the instructions in this manual.

Seiler Instrument's obligations under this warranty are limited to the repair, replacement, or reimbursement of the product only, and, in no event, is Seiler Instrument liable for any consequential or special damages, or costs related to the transportation, installation, or any other costs related to a warranted product.

## **Interpupillary Distance Adjustment**

Looking through the eyepieces on the binocular head, adjust the Interpupillary distance as shown in the image below, until the end user is the Field of View in one single image.



0-220° BINOCULAR MICROSCOPE HEAD



0-180° STRAIGHT/FIXED BINOCULAR MICROSCOPE HEAD

## **Parfocalizing**

#### STEPS:

Set both eyepieces at 0

Take a piece of paper and draw an "X" on it. Place that piece of paper onto a flat area at the recommended focal length (10" with 250mm, 12" with 300mm objective). Adjust the eyepiece until you get a single solid image.

Set the scope to the highest power and position the scope to where the "X" is as sharp as possible.

Then go to the lowest power without moving the microscope's physical position and one eye at a time focus the eyepieces.

Look through the scope and focus on the "X" and change the magnification levels to make sure each setting stays in focus. If the scope goes out of focus start the process over again.


Once the image is clear in both eyes, this completes the Parfocalizing Process.

## **Seiler IQ Magnification Chart**

										OE	JECTI	VE LEN	IS								
			1	75			2	00		2	25	50			- 31	00			40	00	
	position of	magnit	fication	fi	eld	magni	fication	fic	eld	magnit	ication	fie	eld	magnif	ication	fie	eld	magni	fication	fic	eld
eyepiece	button	f 135	f170	f 135	f170	f 135	f170	f 135	f170	f 135	f170	f 135	f170	f 135	f170	f 135	f170	f 135	f170	f 135	f170
-	1 (0.6x)	4.62	5.82	39.00	31.00	4.05	5.10	44.45	35.30	3.24	4.08	55.55	44.10	2.70	3.40	66.70	53.00	2.02	2,55	89.10	70.6
	2 (1x)	7.70	9.70	23.40	18.60	6.75	8.50	26.65	21.20	5.40	6.80	33.35	26.50	4.50	5.66	40.00	31.80	3.37	4.25	53.40	42.3
10x/18mm	3 (1.6x)	12,32	15.52	14.60	11.60	10.80	13.60	16.66	13.25	8.64	10.88	20.85	16.70	7.20	9.06	25.00	19.90	5.40	6.80	33.40	26.5
																10.1					
	1 (0.6x)	5.78	7.28	39.00	31.00	5.06	6.38	44.45	35.30	4.05	5.10	55.55	44.10	3.38	4.25	66.70	53.00	2.53	3.20	90.00	70.
	2(1x)	9.63	12.13	23.40	18.55	8.44	10.63	26.70	21.20	6.75	8.50	33.35	26.50	5.63	7.08	40.00	31.80	4.20	5.30	53.45	42.4
12.5x/18	3 (1.6x)	15,40	19.40	14.60	11.60	13.50	17.00	16.66	13.25	10.80	13.60	20.85	16,55	9.00	11.32	25.00	19.90	6.74	8.50	33.40	26,5
	1 ( 0.6x )	7.40	9.31	34.65	27.50	6.48	8.16	39.50	31.40	5.20	6.52	49 40	39.20	4.32	5.43	59.25	47 15	3.24	4 10	79.00	62.
	2 (1x)	12.32	15.52	20.80	16.50	10.80	13.60	23.70	18.80	8.64	10.88	29.60	23.50	7.20	9.06	35.55			6.80		-
6x/16	3 (1.6x)	19.70	24.83	13.00		1000	21.76	14.80	11.75		17.40		14.70	11.52	14.50	22.25		8.63	10.90		
	1 (0.6x)	9.24	11.64	26.00	20.65	8.10	10.20	29.60	23.50	6.48	8.16	37.05	29.45	5.40	6.80	44.45	35.35	4.04	5,10	59.40	47.
	2 (1x)	15.40	19.40	15.60	12.40	13.50	17.00	17.80	14.10	10.80	13.60	22.25	17.65	9.00	11.32	26.70	21.20	6.74	8.50		_
0x/12	3 (1.6x)	24.64	31.04	9.75	7.70	21.60	27.20	11.10	8.80	17.28	21.76	13.90	11.05	14.40	18.10	16.70	13.25	10.80	13.60	22.30	17.
illuminat	ed field			9	0		6	8			8	5			10	01			13	36	

## The Color Filter and Cleaning

There is a lever installed on the side of the microscope body to put in front of the lamp luminous flux an orange and green filter.

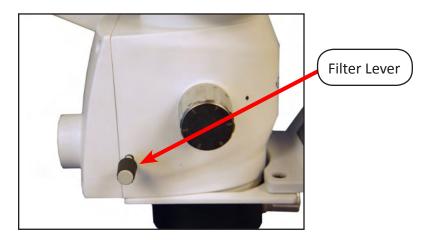

#### Cleaning

The objective, placed in front of the field under clinical or surgical treatment, is exposed to blood and topical medicine spots, etc. The spots dim the passage of the light, with loss of brightness in the optical observation.

Alcohol or ether applied with a clean cotton swab can be used to remove all smudges. Use a soft CIRCULAR movement. Use your laboratory's prescribe procedures to remove blood stains or other contaminants from your equipment.

If the objective is blotched too much, change the cotton swab in each circular friction, avoiding spreading again the impurities.

The Objective lens can be protected by use of an objective protector (6132000). It is placed under pressure in the external margin of the objective lens and protects it against eventual blows of the surgical tools and against contamination.

The metallic parts (chrome-plated or painted) are cleaned with cotton, alcohol and ether.

#### Lubrication


After some years of use we recommend lubrication of the "dovetail", the sliding orthogonal rules for X-Y translation. Apply here, with a cotton swab a delicate oil film.

Do not exaggerate the lubrication. It is self-defeating, and if the microscope is operated inclined to the front, for sure the oil excess will come out through the front.


For lubrication use light film of mineral oil.

## **Dimensions**

Seiler IQ Floor Dimensions

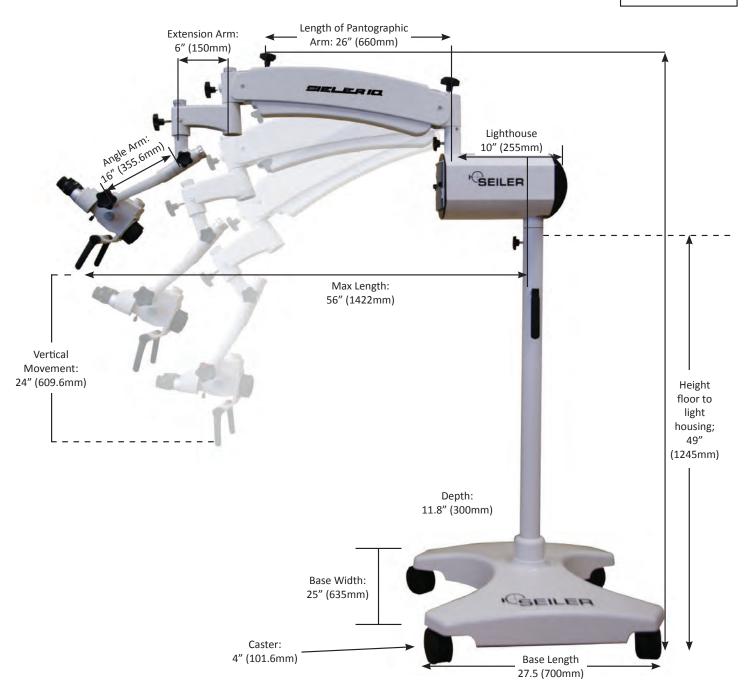

## **Parts Breakdown**

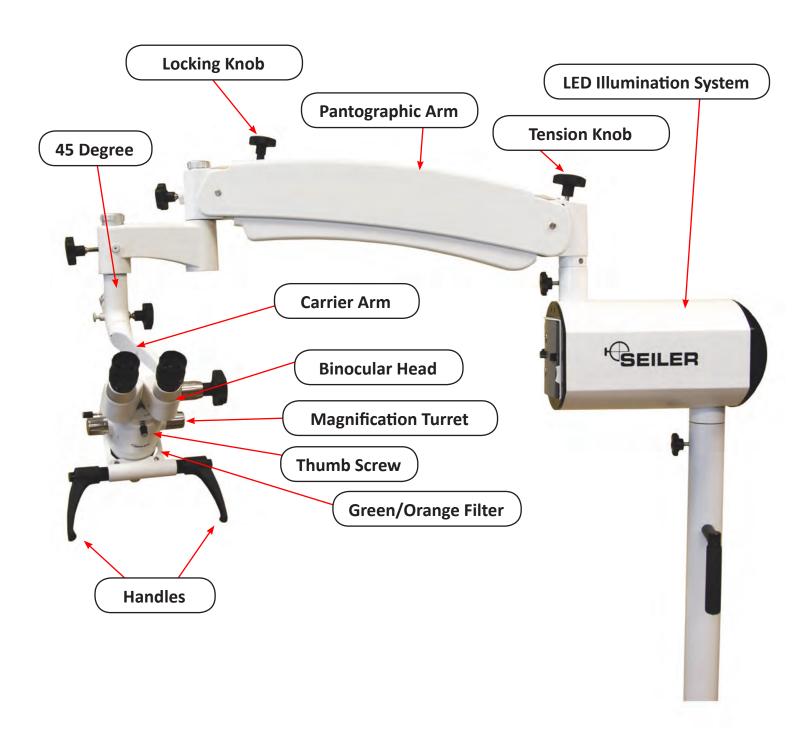

General Specific Details			
		Seile	er IQ
Vertical Optical Working Distance	Minimum Possible	175 mm	6.89 in
Vertical Optical Working Distance	Maximum Possible	400 mm	15.75 in
Microfocus vertical adjusti	13r	nm	
* Microscope Weight (Flo	255 lbs 116 kg		
*Including Packag	(3 bc	oxes)	

Electrical Details	
Power Supply	90 – 264VAC – automatic selection Power supply
Axillary Power Jack	12vDC – 2.1mm female connector – 500ma Rating
Fuses:	3amp – 5x20mm Cylindrical Slo-Blo – 250VAC
Illumination Bulb:	LED

Optical Details		
	Standard Setup	Optional Setup
Objective Lens	<i>f</i> = 250mm	175 – 400 mm
Eyepieces	10x	12.5x, 26x, 20x
Diopter Setting	-6 to +6	NA
Field of Vision	9 - 72 mm	* 4.95 - 105.88 mm

Optical Details		
Seiler IQ	2.3x, 3.2x, 5x, 8.2x, 12.8x, 19x	** Max low: 1.70x – Max High: 48.50x

<sup>\*</sup> Depends on Eyepieces and Objective Lens

<sup>\*\*</sup> Max low refers to the lowest power able to be achieved by combination of eyepiece and objective lens magnification. Max High is the maximum power able to be achieved through combination of eyepiece and objective lens magnification.

## **Owner's Record**

Model Number	
Serial Number	
Date Purchased	
Location Purchased	

Notes



We are here to serve you!

If you have any questions regarding Seiler's products or services, please feel free to contact us.

Toll-Free: 800.489.2282 Local: 314.968.2282 Fax: 314.968.3601

E-mail: micro@seilerinst.com

www.seilerinst.com

**Dane Carlson -** *Microscope Division Manager* dcarlson@seilerinst.com or ext. 365

**Nicole Bas -** *Corporate Marketing/Sales Representative* nbas@seilerinst.com or ext. 345

**Tony Leise -** *Technical Product Information* tleise@seilerinst.com or ext. 363

**Sandy Jeremich-** *Bulb Order Information* speremich@seilerinst.com or ext. 336



3433 Tree Court Industrial Blvd. St. Louis, Missouri 63122 Toll Free: (800) 489-2282 Local: (314) 968-2282

Email: micro@seilerinst.com Web: www.seilerinst.com